
GALAXY AUDIO

Water & Sweat Resistant Headset Mic & Pocket-Sized Wireless Receiver Mic System

EVO-E

Components

- 1. EVO-E Rechargeable Wireless Headset Mic
- 2. EVO-PREC Rechargeable Wireless Receiver
- 3. Headset Windscreen
- **4.** 1/4" to 1/8" Cable
- 5. USB Power Adapter
- 6. Dual USB-C Charging Cable
- 7. Protective Neoprene Pouch
- 8. Quick Start Guide

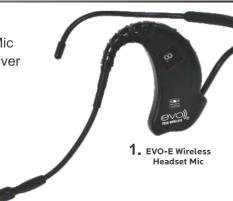







4. 1/4" to 1/8" Cable





Setup





Use the dual USB cable and USB power supply to charge the headset and receiver.



Using the 1/8" to 1/4" cable, connect the receiver to an input on your sound system/mixer.



Use the output, either mic or line level, that is appropriate for your sound system input.



 




The included adhesive backed hook and loop fastener can be used to attach the receiver as needed.



Turn on the receiver by pressing and holding the power button about 3 seconds. The display will show on.



To select a channel press and hold either the up or down button until CHA displays with the current channel. Now use the up or down buttons to change the channel.



Adjust the volume using Up and Down buttons. If you previously adjusted the channel setting wait about 5 seconds for the receiver to default back to volume



Turn on the headset by pressing and holding the power button about 3 seconds, the LED powers on. To turn off, press and hold until the LED goes off.



When powered On, a short power button press will mute the mic, the LED will start slowly flashing, another short press will un-mute the mic.



Select the channel matching the receiver using the channel select button.



Put on the headset, the strap can be used to adjust the fit.



Position the microphone, around the front to the side or at the corner of the mouth.



Turn up the volume on the sound system channel to the level needed.







Water & Sweat Resistant Headset Mic & Pocket-Sized Wireless Receiver Mic System

Quick Start Guide











Other Helpful Sources

EVO-E Product Page



EVO-E Downloads Quick Start, Frequency Codes, and Data Sheets



YouTube Channel



Specifications subject to change without notice.

601 E. Pawnee Wichita, KS 67211 316. 263.2852 FAX 316.263.0642 www.galaxyaudio.com

Distributed in Canada by **ADIpro.ca** 1275 Newton, unit 6 Boucherville, QC J4B 5H2 Canada 450.449.8177 FAX 450.449.8180

Printed in China

V20221130

FAQ

1. Q. How long does a charge last?

A. About 4 hours

2. Q. Can I use the USB cable to give the Receiver continuous power?

A. Yes, however if power is lost you will need to press the power button again.

3. Q. How do I know which output to use?

A. If you do not know if your input is mic level or line level, start with the mic level output. If you are unable to get acceptable level/volume, move to the line level output.



